


RELAY.

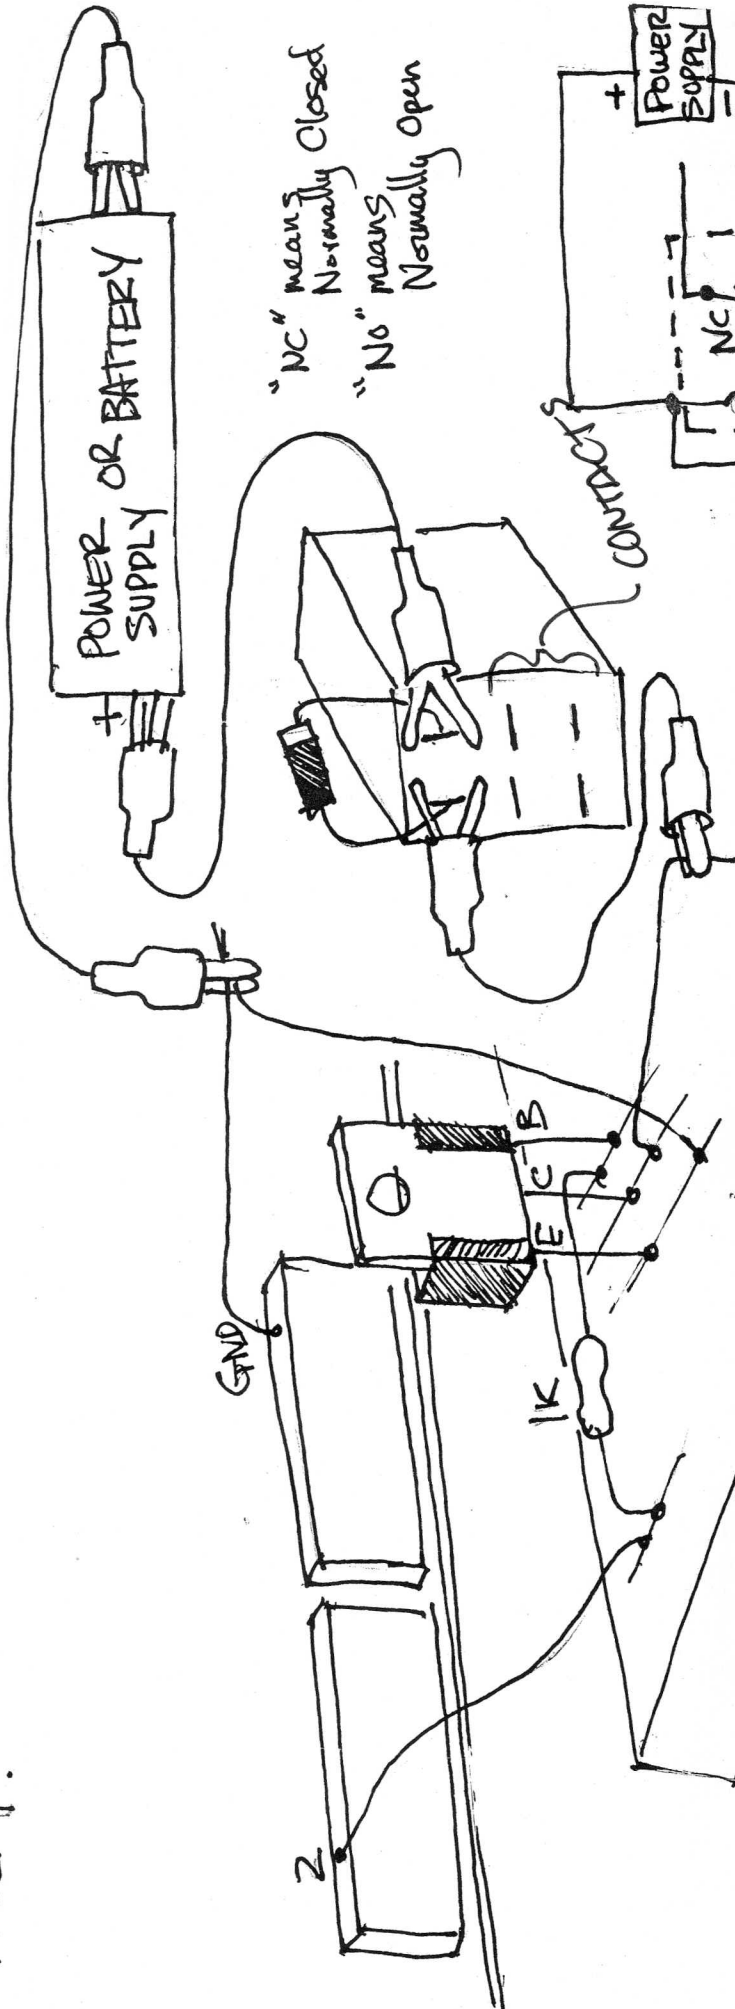

"NC" means Normally Closed
 "NO" means Normally Open

USE THE CONTACTS TO COMPLETE (SWITCH) ANOTHER CIRCUIT.

NOTE: Size your power supply to the relay coil voltage. A 12VDC relay needs a 12 VDC power supply! Also do not exceed the capacity of the contacts. If the relay doesn't have that information on it, don't use it.

